# Maintenance Instructions

### **Islander Classic Series Fly Reels**



#### Thank you for purchasing an Islander Classic (IC) series fly reel.

In this manual you will find information on how to take care of you new reel, how to "tune" the sound on the reel to your liking, and how to troubleshoot any problems you are having with the reel.

By following these instructions you will get a lifetime of enjoyment out of this product.

#### Features of the Islander Classic:

- Smooth, no end play between frame and spool.
- Simple clicker drag system.
- Wide range of drag pressure with 5 settings, which is controlled by a frame side adjustment knob.
- One-piece spool and frame construction.
- Quick release spool.
- Easily converts from right to left hand retrieve without tools.

## **Major Components**



#### Taking Care of Your Reel


Like any precision instrument, this fly fishing reel must be taken care of to ensure a long life. Removing your line from the reel before washing and drying is the best way to keep your reel clean. Backing that is immersed in water will remain wet and will hold moisture against the spool cavity. When rinsing your reel, wash the frame in hot, soapy water, and just wipe down the spool with a cloth.

### **Specifications**

	No. 6	No. 8	No. 10
Line Weight	6/7	8/9	10/11/12
Spool Dia. (in.)	4.2	4.2	4.2
Spool Width (in.)	1.25	1.25	1.25
Spool VoL (in.3)	6	8	10
Weight (oz)	11.2	11.2	11.2
Capacity	* Line capacity varies by line style used and backing used.		

### **Lubricating Your Reel**

Your reel comes from the factory lubricated. Periodic lubrication is recommended to maintain optimum performance.

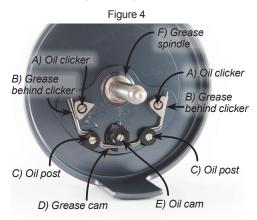

- 3. Apply a small amount of oil around the cam and cam screw. Location (E).
- Apply a small amount of oil around each clicker sleeve. Locations (A).
- 5. Apply a small amount of grease at the base of the spindle. Location (F).
- 6. Apply a thin layer of grease around the teeth of the gear. Location (G). Use an old toothbrush to clean the gear.

- Note: Before greasing your reel it is a good idea to remove any grit from the external and internal components.
- Apply a small amount of grease where the clickers and the spring meet. Locations (B).
- Apply a small amount of grease where the cam and the spring meet. Location (D).



#### Converting from Right to Left Hand



Figure 1 — set for right-hand retrieve

- 1. Rotate right hand clicker (A) so that it points downward.
- 2. Then rotate left hand clicker (B) so that it points towards the center of the reel (as per Fig. 2).
- 3. Re-engage your spool.

Please note: To make the conversion from right to left hand easier, please set the drag to minimum by turning the adjustment knob counterclockwise until it stops.

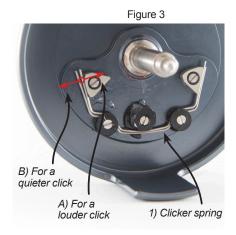


Figure 2 — set for left-hand retrieve

### Tuning your reel

If desired, the sound and drag of your reel can be tuned with the tip of your finger. The following instructions are for a right hand retrieve configuration. Left hand configuration tuning is mirrored.

- To reduce the drag and sound of the reel, tweak the clicker-drag spiring in the (B) direction. This will reduce the pressure of the spring on the back of the clicker, therefore reducing drag and sound.
- To increase the drag and sound of the IC, tweak the clicker-drag spring in the (A) direction. You may need to slide the spring up from behind the clicker. This will increase the force of the spring on the clicker, increasing drag and sound.



#### **Product Information**

#### **Recommend Lubricants**

Islander recommends the use of Super Lube® brand oil and grease with Teflon® for all lubricating applications. Super Lube® is manufactured by: Synco Chemical Corp., N.Y. Teflon® is a registered trademark of E.I. duPont DeNemours & Co.

Oil: Super Lube® Multi-Purpose Synthetic-based Oil with PTFE® Grease: Super Lube® Multi-Purpose Lubricant with Teflon®

#### **Recommended Adhesives**

Islander Reels recommends the use of Loctite® 262 Permanent Threadlocker and Loctite® 242 Removable Threadlocker. Loctite® 262 and Loctite® 242 are registered trademarks of Loctite Corp., U.S.A.©

If you have any questions or comments about your reel, please phone, fax, or e-mail Islander Reels. If Islander Reels requests that your reel be sent in for repair, please remove the fly line from the reel.



Islander Reels 6771 Kirkpatrick Crescent Saanichton BC V8M 1Z8 Canada Phone (250) 544-4856 Fax (250) 544-1450 e-mail info@islander.com site www.islander.com